


M50

Handheld Vacuum Cleaner

User Manual

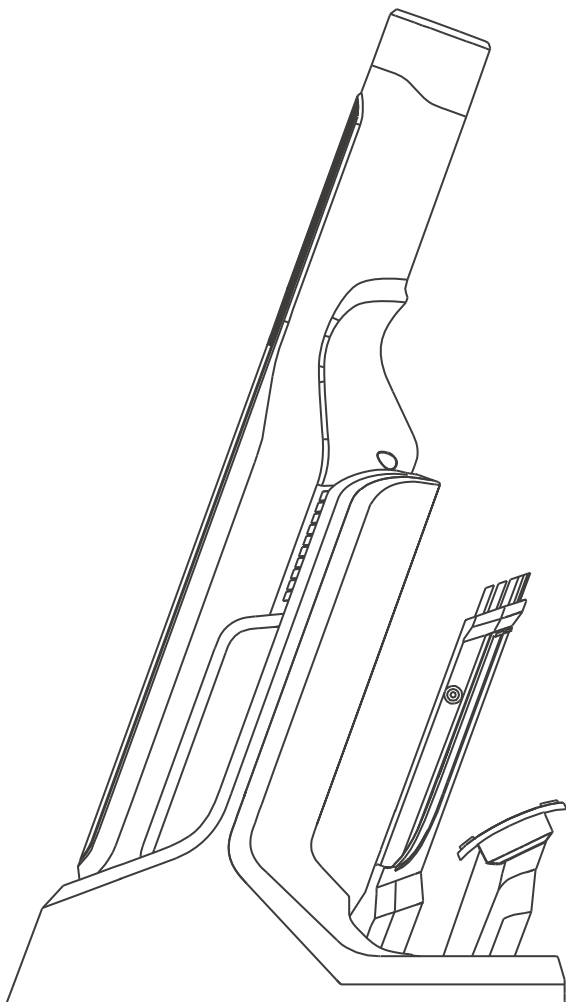

EASINE
by ILIFE

For more details, please visit www.iliferobot.com

Thank you for choosing EASINE M50 handheld vacuum cleaner !
You've joined millions of people to get the cleaning done in high efficiency.

This manual helps you to keep your vacuum cleaner performing at its best. Please take a few moments to read through it.

You may also connect with us on Facebook and Instagram to enjoy exclusive benefits:

- Get model-specific customer support, including Q&A, maintenance tips, demo videos, live chat and more;
- Get the most recent product updates including new product launches, exclusive discounts and special promotions.

You may find us on:

Facebook: facebook.com/iliferobotics

Twitter: twitter.com/ILIFEROBOTUS

If you have any questions, please contact our customer service for assistance or visit www.iliferobot.com for more information.

Enjoy the high-performance cleaning of EASINE M50.

ILIFE Innovation

ILIFE Customer Service



1-800-631-9676 (Toll free for USA & Canada)

Mon-Fri: 9:00 am - 5:00 pm CST



support@iliferobot.com

Contents

1. Important Safety Instructions	1
2. Product Composition	3
2.1 Product layouts	3
2.2 List of accessories	3
3. Product Operation	4
3.1 Indicator light introduction	4
3.2 Use the charging dock to charge	4
3.3 Use the Type-C cable to charge	4
3.4 How to use	5
4. Maintenance and Troubleshooting	6
4.1 Main body (non-washable parts) cleaning	6
4.2 Dust cup and filter system cleaning	6
4.3 Maintenance skills	7
4.4 Troubleshooting	7
5. Product Technical Parameters	8
6. Disposal Information	9

Important Safety Instructions



SAFETY INSTRUCTIONS

- This appliance can be used by children aged from 8 year and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance, cleaning and user maintenance shall not be made by children without supervision.
- Make sure that the input voltage of the vacuum cleaner's adapter fits your local voltage before connecting the appliance to the power for charging.
- Dry your hands before operating the appliance.
- Do not pull the cord to remove the adapter from the mains power supply, unplug the appliance by hand.
- Do not use the adapter to recharge non-rechargeable batteries.
- Do not use the appliance if it has been dropped or if there are visible signs of damage.
- Do not use any parts/accessories or adapters other than those supplied with this appliance, as this may cause damage.
- Do not use this appliance outdoors.
- Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
- Take care when equipping accessories with rotating parts as this could cause entrapment.
- Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- This appliance contains no user-serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs.
- Keep the appliance away from heat or sharp edges that could cause damage.
- Do not immerse the appliance in water or any other liquid.
- Do not store the appliance in direct sunlight or in high humidity conditions.

Important Safety Instructions



BATTERY SAFETY

- In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes. If the contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Do not leave battery packs on charge for prolonged periods of time.
- Do not use any charger other than that specifically provided for use with the product.
- The supply terminals are not to be short-circuited.
- Do not store above 60°C, avoid storing in direct sunlight.
- Do not crush, puncture, dismantle or otherwise damage the battery pack.
- Do not expose the battery pack to heat or fire as it may explode.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
 - the battery must be removed from the appliance before it is scrapped.
 - the battery is no be disposed of safely.




WARNING

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

1. Use the appliances only with specifically designated battery packs. The use of any other battery packs may create a risk of injury and fire.
2. Under abusive conditions liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
3. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause an explosion.
4. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.

Product Composition

Product layouts

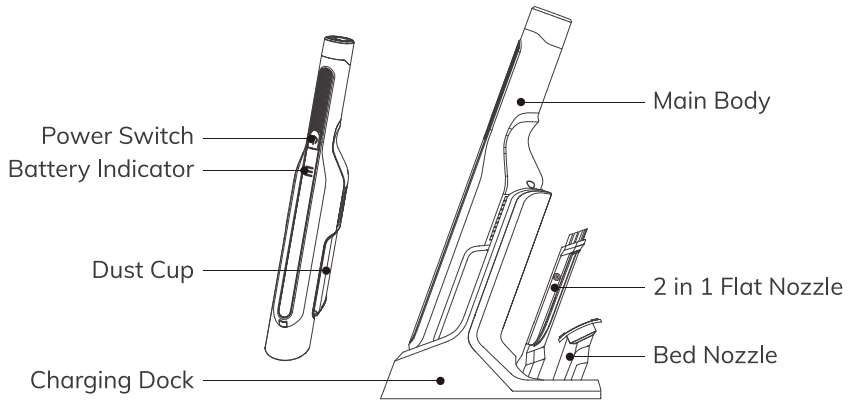


List of accessories



Main Body



Charging Dock

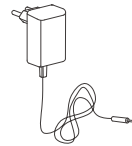

Power Adapter



2 in 1 Flat Nozzle



Bed Nozzle



Type-C Cable




High Performance Filter




User Manual

Indicator light introduction

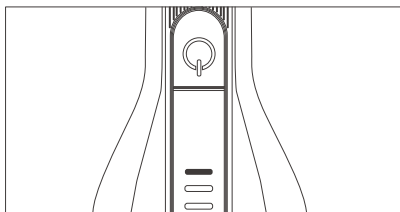


When charging, 3 LEDs light up in cycles.

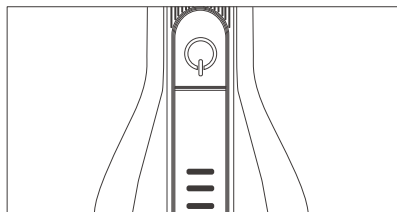


When fully charged, 3 LEDs keep on.

Use the charging dock to charge


- 1 Connect one end of the charger to the charging hole at the bottom of the charging dock.

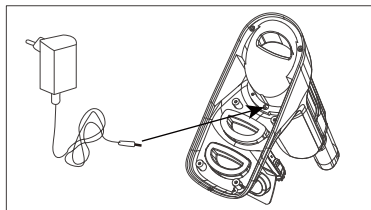

- 2 Connect the other end of the charger to the power outlet.

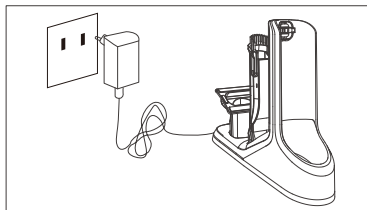


- 3 Place the vacuum cleaner on the charging dock. The three battery indicators light up cyclically, indicating that the vacuum cleaner is charging.

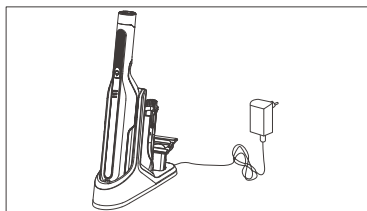

Use the Type-C cable to charge

Connect one end of the equipped type-c charging cable to the charging hole of the vacuum cleaner, and the other end to the power outlet. The three battery indicators light up cyclically, indicating that the vacuum cleaner is charging.

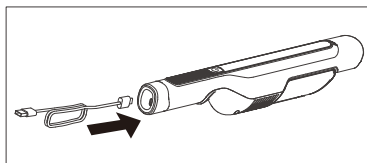


Product Operation


How to use

! Attention!


1. It is highly recommended to charge it for more than 5 hours before using it for the first time.
2. According to the cleaning needs, select the appropriate nozzle.
3. The vacuum cleaner has two cleaning modes: Max suction mode and normal suction mode. Press the power switch button and the vacuum cleaner will start operating in normal mode. Press the power switch button once again and the vacuum cleaner will operate in Max suction mode. Press the power switch button for the third time, the vacuum cleaner will stop running. Please select the operating mode according to the cleaning needs.

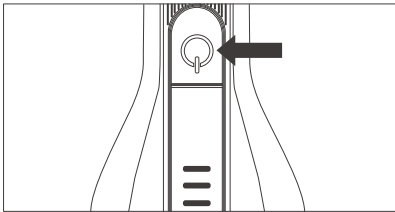


- 1 Press the power switch button.

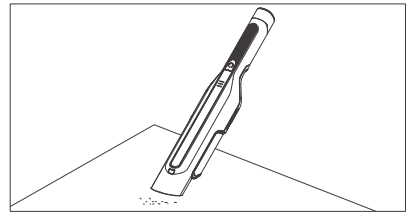


- 2 Align the suction port of the running vacuum cleaner with the surface of the object to be cleaned.

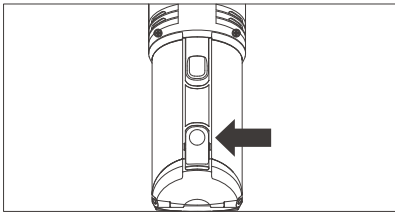


- 3 Press the button at the bottom of the dust cup.

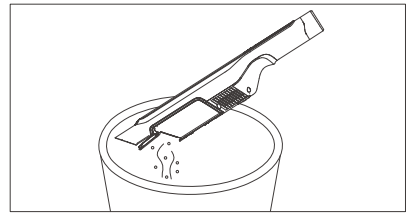

- 4 Align the bottom of the dust cup with the trash can and pour out the debris.

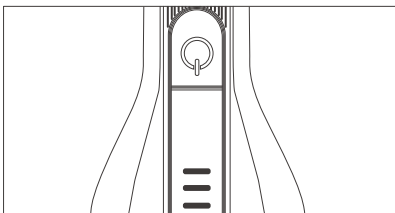

- 5 In use, the 3 indicators lights will go out one by one according to the remaining power.

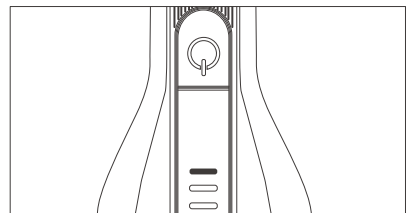

- 6 Low battery, 3 indicators lights flashing.

Main body (non-washable parts) cleaning

1. Please turn off the power before cleaning the main body.
2. Please wipe the the main body / charging dock regularly with dry clean cloth.
3. Please avoid direct sunlight and store in a cool and dry place.

Dust cup and filter system ceaning

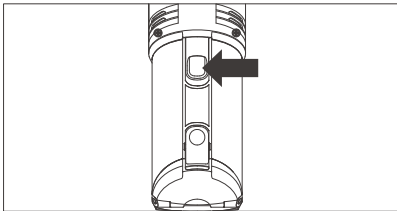


Figure 1

- 1 As shown in Figure 1, slide the knob on the dust cup.

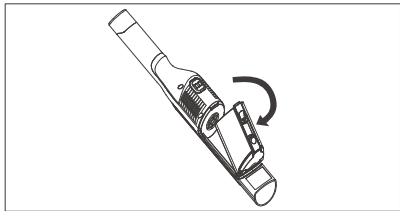


Figure 2

- 2 As shown in Figure 2, slide the slider to the bottom to take out the dust cup in this direction, and then dump out the garbage.

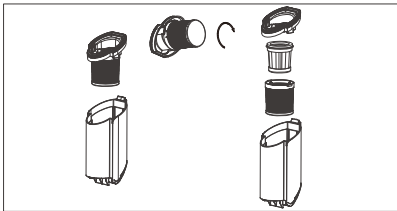


Figure 3

- 3 As shown in Figure 3, Take out the stainless steel filter and high performance filter.

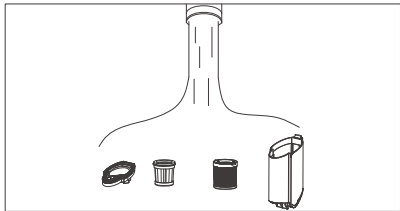


Figure 4

- 4 Rinse the removed parts, and then put them back when they are completely dry after cleaning.

- 5 After cleaning, close the dust cup cover, and then put the dust cup back in the main body.

! Note:
Please put the cleaned filter in a ventilated place to dry before use.

Maintenance and Troubleshooting

Maintenance skills


- Please clean regularly to extend the service life of the vacuum cleaner.
- Please clean the filter regularly with water and ensure that the filter has a good filtering effect.
- It is recommended to clean the dust cup in time after each use, when the filter clogged with too much dust, it should be cleaned or replaced as necessary, so that the vacuum cleaner can work more efficiently. (You can buy the filter parts from the vacuum cleaner seller)
- **Important:**
In order to ensure the safety and reliability of the product, repairs, maintenance and adjustments (not listed in this manual) should be performed by authorized service centers or other qualified maintenance personnel, and the same replacement parts should always be used.

Troubleshooting

Check out the contents below to deal with the abnormal problem when the device doesn't work normally.

Malfunction	Possible Reason	Solution
Main body is not working	Dead battery	Charge the vacuum cleaner.
Suction reduced	1. The dust cup is full of dust. 2. The air inlet filter of the dust cup is full of dusts.	1. Dump the dust out of the dust cup. 2. Clean or replace the air inlet filter of the dust cup.
The charging indicator does not change when charging	The charger is not fully inserted into the charging end of the battery pack.	Fully insert the charging terminal into the charging terminal of the battery pack.
Insufficient use time after charging	1. Insufficient charging time 2. Battery aging	1. Fully charge the battery 2. Please contact customer service.

Product Technical Parameters

Item	Handheld Vacuum Cleaner
Model	M50
Net weight	0.65kg
Dustcup capacity	0.15L
Dimension	443 X 78 X 73mm
Rated voltage	11.1V
Rated power	110W
Item	Adapter
Input	AC 100-240V~50/60HZ 0.3A max
Output	DC 14V  500mA

Disposal Information

Disposal

The battery used with this device must not be disposed of in household waste.

The device and the battery must be disposed of properly.

The housing of the battery must never be opened, and must be disposed of as a whole.



This product is subject to the provisions of European Directive 2019/19/EC.

The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union,

This applies to the product and all accessories marked with this symbol.

Products identified with this symbol may not be discarded with normal household waste, but must be taken to a collection point for recycling electric and electronic appliances.



This recycling symbol marks e.g. an object or parts of the material as valuable for recycling. Recycling helps to reduce the consumption of raw materials and protect the environment.



Packaging

When disposing of the packaging, make sure you comply with the environmental regulations applicable in your country.

Distributor: Shen Zhen ZhiYi Technology Co., Ltd

3rd Floor, Bld B, Hytera Technology Park, No.3, 4th of Baolong Road, Longgang, ShenZhen, China

● ILIFE Customer Service



1-800-631-9676 (Toll free for USA & Canada)

Mon-Fri: 9:00 am - 5:00 pm CST



support@iliferobot.com